

Ojai Valley Inn Bed Instructions (v1)

Queen & Cal King

Wood Screws - 24

Short Bolts - 16 (Wood Base)

Long Bolts - 46 (Upholstered Frame & Connecting Bolts)

Wood Base

(x2) Short Wood Frame Exterior (One Side Black)
(x2) Long Wood Frame Exterior (One Side Black)
(x2) Interior Wood-frame Supports (All Wood)
(x4) Corner Brackets
(x4) 90* Inner-Mounting Brackets
(x24) Wood Screws
(x16) Short Bolts

Upholstered Frame

(x2) Short Side
(x2) Long Side
(x4) Large Corner Bracket
(x4) Center Support Brace
(x36) Long Bolts

Wood Flat Foundation

(x1) Large Wood Sheet
(x1) Small Wood Sheet
(x3) Mending Blade
(x10) Long Bolts


STEP 1

Step 1 – Place Bed Foundation Slats on Ground.

2 Wood Slats with Brackets in Middle- Flush Side Up!

Corner Slats with “Short Side Facing Up – See Next Step To Confirm Orientation

1. Use 3 short wood screws per bracket to attach center slats to pre-drilled holes in outer Frame.

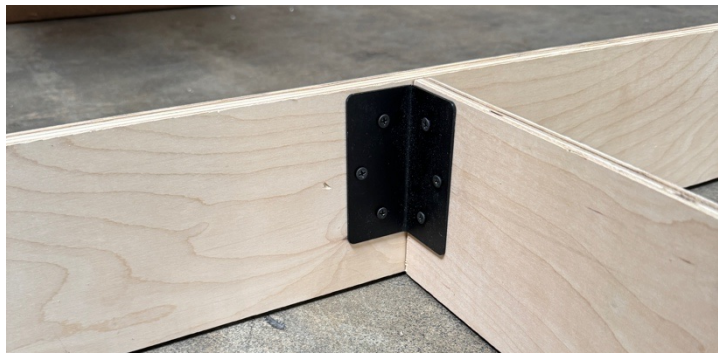

STEP 2

1. Place 4 SHORT Allen Bolts and 1 corner bracket as shown at each corner.

Note the brackets will all be flush at top – ensure all wood frame pieces have “short side” facing up

2. Screw in All 4 corners WITHOUT TIGHTENING FULLY





ONCE FLAT ON GROUND, TIGHTEN ALL SCREWS AND BOLTS!

FOUNDATION COMPLETE!

NOTE ALL WOOD IS FLUSH AT TOP EDGE
& ALL BRACKETS ARE FLUSH AT CORNERS

STEP 3

1. Place Wood Bases so all corners have 3-pre-drilled holes. The Panels are held together by 3 black metal straps and 6 bolts. For ease of assembly, use the assembled foundation as a platform to assemble .



2. Slide wood apart & Place strap beneath. Use LONG bolt to hold strap, then slide wood together and attach other side.
3. Use 1 Long Bolt Per Corner to attach Flat Support to Wooden Base Corners using the Inner-most pre-drilled hole.



4. STEP 4

1. Get all 4 Large Corner Brackets and Upholstered Bed Pieces. Each Corner needs 4 LONG bolts.
2. Carefully Assemble bed with corners facing towards short seam of upholstery.



Do NOT Overtighten! Final Adjustments may be needed.



3. CAREFULLY place final piece on top of brackets and screw together – an extra set of hands may be useful at this step.



4. Place Frame on ground, ensuring all brackets are oriented as pictured and add final braces with LONG bolts.





FINAL STEP!

1. Place Wood on top of brackets – Attach final 2 bolts per corner and 1 per center support. **Please note the third bolt is not shown below in picture**



2. Place Bed on top of foundation, align corner brackets and use final LONG bolts to attach.



FINISHED!!!

See Below For Bottom View

